



## Foot switch 脚踏开关


EKW-5A  
LLJFS4

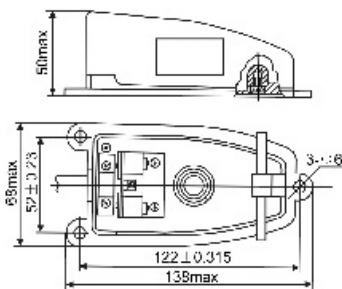


LT2  
LLJFS5

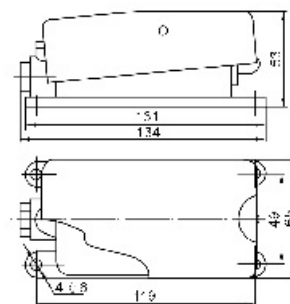


JDK-11-6A  
ZSJT-1 (自锁式)  
ZSJT-2 (自锁式)  
LLJFS10

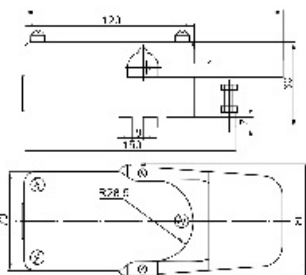


LLJFS6 (带紧急蘑菇按钮)

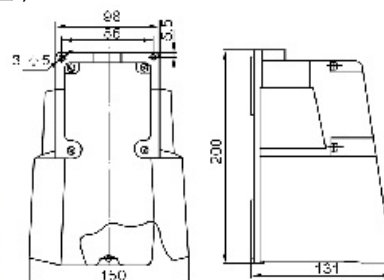


LT1-11  
LLJFS19

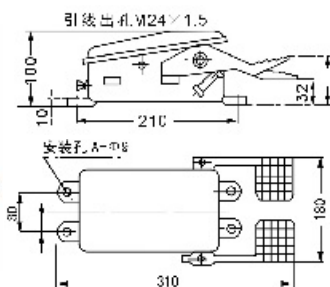


LT1-02  
LLJFS20

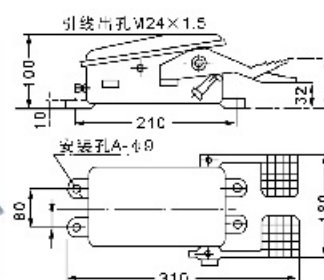


YDT1-11, YDT1-12  
LLJFS17

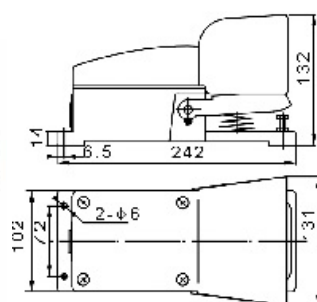

YDT1-14  
LLJFS18

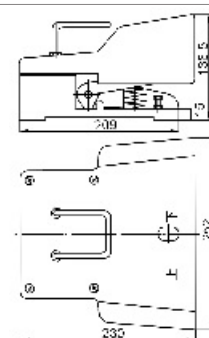

LLJFS24 (2个脚踏)

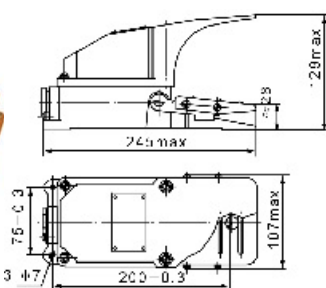

BZH1-5 (防爆型)

