

# Distribution Box

## LME-type single-phase



LME-04S



LME-06S



LME-08S, LME-10S



LME-12S

## Three-phase




LME-01T, LME-06T



LME-08T



LME-10T

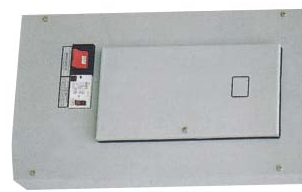

LME-12T

## Three-phase with leakage breaker(RCD)

## GT-type single-phase



GT-06



GT-08



FT-08S



FT-04T



MCB FUSE



MCB FUSE

## FT-type single-phase and three-phase



GG1W



GG2W



GG3W GG4W



GG6W GG8W



GG12W GG18W



GH2W



GH4W



GH6W



IT-06



IT-08



FH12/FH14



FH18



GA1



GA4



FM2



FM4



FM6



FM8